

Diagram 10

- 49 Brake light switch
- 129 PCM relay
- 150 Cruise control module
- 151 Vehicle speed sensor
- 152 Brake pedal position switch
- 153 Clutch pedal position switch
- 154 Transmission control unit
- 155 Transmission range sensor
- 156 Transmission hardware unit
- 157 Brake pressure switch
- 158 Reverse light relay
- 159 Gearshift lever unit

* diesel only

Cruise control

